

ARCFLASHWEAR

PR97® FR Secondary Workwear – Size Charts

Women's Measurements	Men's Measurements
Bust: Measure around the fullest part of the bust and shoulders, under your arms with your arms at the resting position. Waist: Measure over your undergarments at the natural waistline, usually 1cm below the navel. Lower Waist: Measure over your undergarments, usually 4cm below the natural waistline. Hip: Measure over your undergarments at the hip, usually the widest part, approximately 25cm below the waistline. In-leg: Measure from the crotch to the ankle bone. Stand straight and have someone measure to avoid bending and distorting the measurement.	Neck: Measure around your neck where your shirt collar would normally sit. Chest: Standing naturally, measure around the fullest part of your chest, under your arms with your arms at the resting position. Waist: Measure over your undergarments at the waistline, usually 1cm below the navel. In-leg: Measure from the crotch to the ankle bone. Stand straight and have someone measure to avoid bending and distorting the measurement.



Recognised throughout the world as a leading textile for secondary protection in the molten metal industry.



Men's PR97® FR Shirt

Allow at least one size up for the PR97® FR Smelter Coat as an Overlay Garment

Size	XS	SM	M	L	XL	2XL	3XL	4XL	5XL	6XL
Neck Cms	36	37/38	39/40	41/42	43/44	46	48	50	52	54
Body Chest Cms	81	89	97	105	113	121	129	137	145	153
Body Chest Inches	32	35	38	41	44.5	47.5	50.5	54	57	60

Men's PR97® FR Pants / Trousers

	72R XXS	77R XS	82R S	87R M	92R L	97R XL	102R 2XL	107R 3XL	112R 4XL	117R 5XL	122R 6XL
REGULAR											
Body Waist cms	72	77	82	87	92	97	102	107	112	117	122
Body Waist inches	28	30	32	34	36	38	40	42	44	46	48
In-leg Length cms	77	80	82	84	84	84	84	84	84	84	84

	87S	92S	97S	102S	107S	112S	117S	122S	127S	132S
STOUT										
Body Waist cms	87	92	97	102	107	112	117	122	127	132
Body Waist inches	34	36	38	40	42	44	46	48	50	50
In-leg Length cms	80	80	80	80	80	80	82	82	82	82

	74L	79L	84L	89L	94L
LONG					
Body Waist cms	74	79	84	89	94
Body Waist inches	29	31	33	35	37
In-leg Length cms	84	86	88	88	88

Women's PR97® FR Garment Sizes (All Styles)

Size Cms	6	8	10	12	14	16	18	20	22	24
Bust	80	85	90	95	100	105	110	115	120	125
Natural Waist	60	65	70	75	80	85	90	95	100	105
Lower Waist	67	72	77	82	87	92	97	102	107	112
Hip Size	87	92	97	102	107	112	117	122	127	132
In-Leg Length	75	75	77	77	80	80	80	80	80	80