

## Stormy Life Vest Systems

### Size Chart

Height Sizes Are In Centimetres (cm) / Feet (' and Inches (")  
Chest and Waist Sizes Are in Centimetres (cm) / Inches (")

SIZE	XS	S	M	L	XL	2XL	3XL	4XL *	5XL *
HEIGHT	152cm 5' 0"	157cm 5' 2"	162cm 5' 4"	172cm 5' 8"	183cm 6' 0"	188cm 6' 2"	188cm 6' 2"	188cm 6' 2"	188cm 6' 2"
CHEST SIZE	75 - 85cm 29" - 34"	85 - 95cm 33" - 37"	95 - 105cm 37" - 41"	105 - 115cm 41" - 45"	115 - 125cm 45" - 49"	125 - 135cm 49" - 53"	135 - 145cm 53" - 57"	145 - 155cm 57" - 61"	155 - 165cm 61" - 65"
WAIST	70cm 28"	80cm 31"	90cm 36"	95cm 38"	100cm 40"	105cm 42"	115cm 45"	120cm 47"	125cm 49"

\* Sizes 4XL and 5XL are available as Made To Order only

#### General Fitting Tips

You need the life vest to be comfortable but not too loose. There needs to be room in the STORMY vest to accommodate the inflation chamber and the extra size required is reflected in the chest advice on the size label. You will need to adjust any belts or harness to fit snug but not tight. A harness is a personal piece of equipment and the straps must be perfectly fitted to your body, so adjust it and familiarise yourself with every strap and buckle and how they work in your life vest.